

ETP HYDRO-GRIP TYPE G




**OPERATING INSTRUCTION
EINBAUANLEITUNG
INSTRUCTIONS DE MISE EN OEUVRE
取扱説明書
ISTRUZIONI DI FUNZIONAMENTO
INSTRUCCIONES DE MANEJO
KÄYTTÖOHJE
BRUKSANVISNING**

ETP Transmission AB
Roxtorpsgatan 22, Box 1120
SE-581 11 Linköping, Sweden

ETP Transmission Inc.
135 Furniture Row
Milford, Connecticut 06460, USA


www.etp.se

ETP HYDRO-GRIP TYPE G

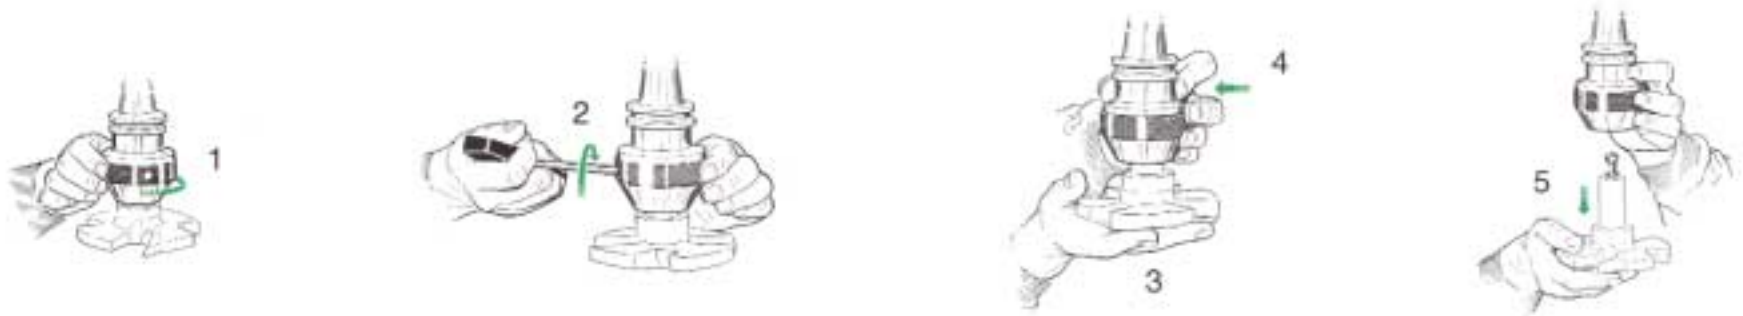

Tolerance on the tool shank
 Toleranz des Werkzeugschaftes
 Tolérance de queue d'outil
 工具のシャンク径公差
 Toleranza stelo utensile
 Tolerancia de la espiga de la
 herramienta
 Työkalun varren toleranss
 Tolerans på verktygsskaft

Ø 12 - 16 mm Ø 1/2" - 5/8"	h7	0 mm	0
		-0.018 mm	-0.00071"
	g6	-0.006 mm	-0.00024"
		-0.017 mm	-0.00067"
Ø 20 - 25 mm Ø 3/4" - 1"	h7	0 mm	0
		-0.021 mm	-0.00083"
	g6	-0.007 mm	-0.00028"
		-0.020 mm	-0.00079"

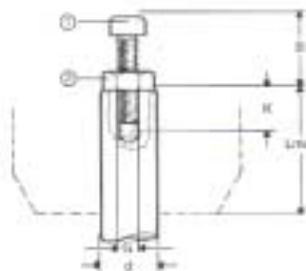

Type	d	L min mm	B min mm	B max mm	K mm	G mm	① ISO 4762	② ISO 4035
G 12	12	29	17	22	16	M6	M6x25	M6
G 16	16	35	17	22	16	M6	M6x25	M6
G 20	20	41	19	24	16	M8	M8x25	M8
G 25	25	48.5	19	24	16	M8	M8x25	M8
G 1/2"	1/2"	30.5	17	22	16	M6	M6x25	M6
G 5/8"	5/8"	35	17	22	16	M6	M6x25	M6
G 3/4"	3/4"	39.5	19	24	16	M8	M8x25	M8
G 1"	1"	48.5	19	24	16	M8	M8x25	M8